


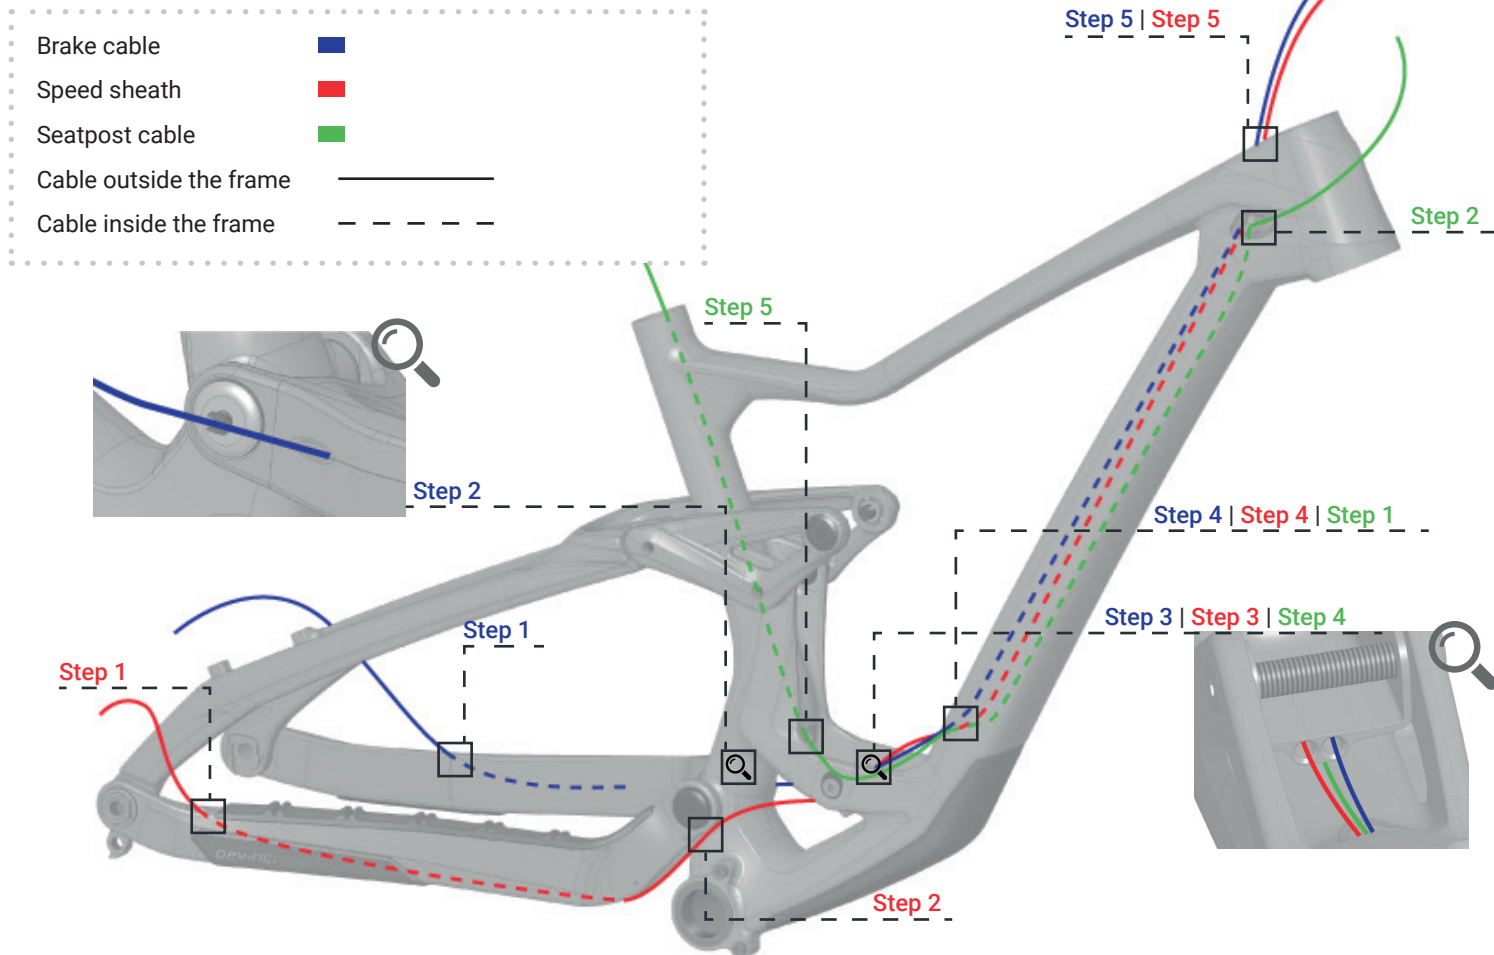

Brake cable

Step 1:

Pass the cable through the opening on the base. Bring it out into the opening on the side of the front of the chainstay.

Step 2:

Set the cable with a clip created for this purpose.

Step 3:

Pass the cable under the shock absorber plates in the left opening.

Step 4:

Pass the cable through the opening of the diagonal.

Step 5:

Remove the cap from the cable guide on the left side of the diagonal, take out the cable (Use the large hole). * Do not replace the cable guide cap *

Step 6:

Slide the tube of anti-impact foam over the cable as far as the diagonal.

Seatpost cable

Step 1:

Pass the cable through the opening at the bottom of the diagonal.

Step 2:

Remove the cable guide cap on the right side of the diagonal and take out the cable.

Step 3:

Slide the tube of anti-impact foam over the cable as far as the diagonal. * Replace the cable guide cap *

Step 4:

Pass the cable under the shock absorber plates under the two openings.

Step 5:

Pass the cable through the opening at the bottom of the seatpost, bring out from the top.

Speed sheath

Step 1:

Pass the sheath through the opening at the top of the chainstay.

Step 2:

Take out the sheath through the opening of the chainstay and fix it with a clip, to the cavity, located under the front of the chainstay.

Step 3:

Pass the sheath under the shock absorber plates in the right opening.

Step 4:

Pass the sheath through the opening of the diagonal.


Step 5:

Take out the sheath by the cable guide on the left side of the diagonal (Use the small hole).


Step 6:

Slide the tube of anti-impact foam over the sheath as far as the diagonal. * Replace the cable guide cap *


ITEM	DESCRIPTION	PART No.	QTY.
1	RIGHT CABLE GUIDE 9702 WITH HOLE	MFB17007	1
2	LEFT CABLE GUIDE 9702 WITH HOLE	MFB17008	1
3	RIGHT CABLE GUIDE 9702 W/O HOLE	MFB17009	1
4	LEFT CABLE GUIDE 9702 W/O HOLE	MFB17010	1
5	CABLE HOLDER M5 FOR CABLE(B) DIA.5mm	MFB18002	1
6	SINGLE CABLE GUIDE	MFB20003	1
7	TRIPLE CABLE GUIDE	MFB20004	1
8	ALLEN FLAT SCREW M3*0.5*10mm SS Black	MFV18007	4 </td
9	LOWER SHOCK SPACER 23mm X 10.1mm x 2.5mm	MFP18005-01	2

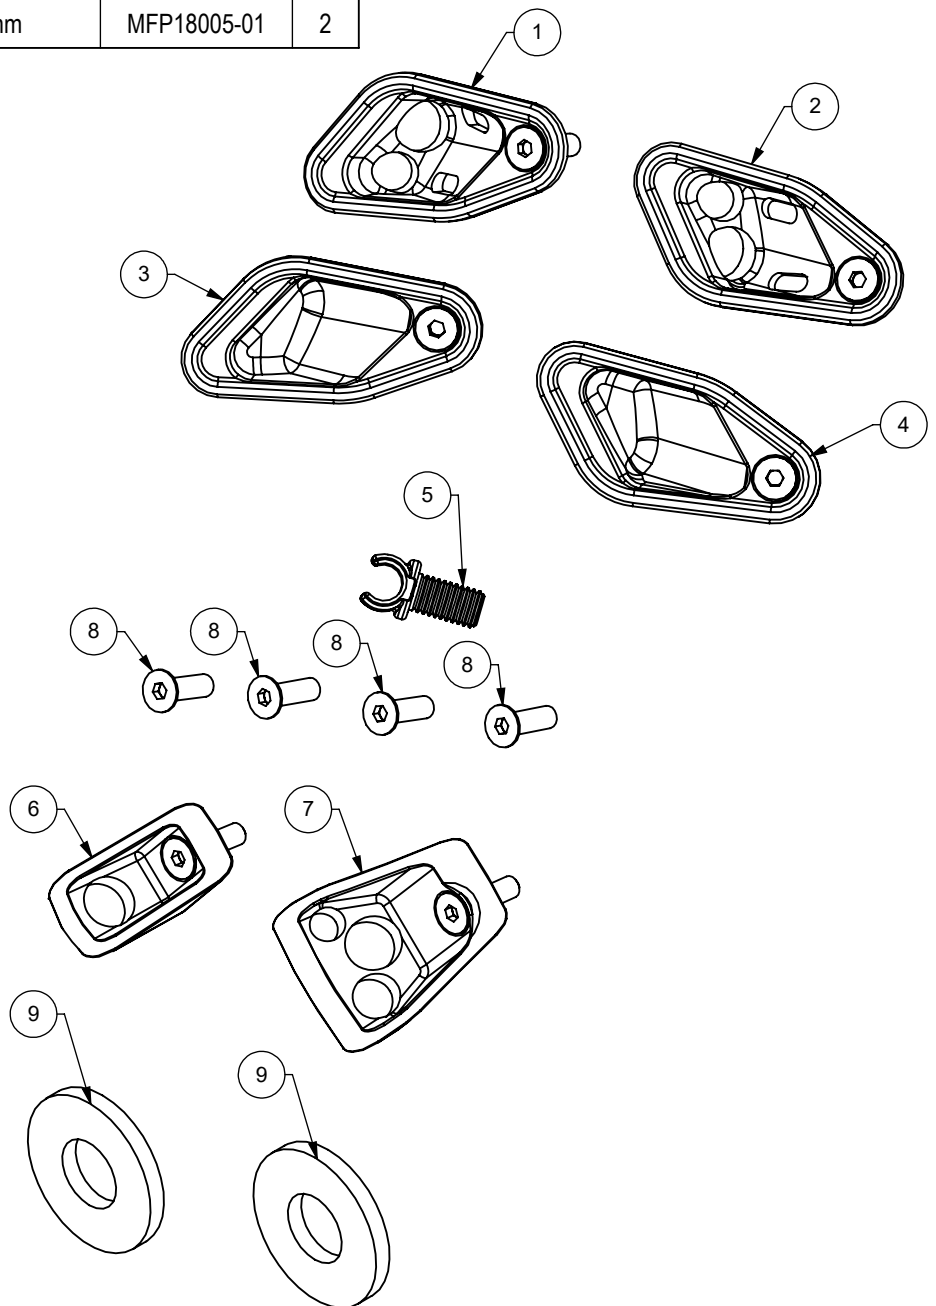


ITEM	DESCRIPTION	PART No.	QTY.
1	PIVOT NUT	MFP20016-01	2
2	DROPOUT PIVOT LEFT SHAFT	MFP20018	1
3	PIVOT SHAFT SCREW 10mm	MFP16015-01	1
4	CS PIVOT SHAFT 83mm WITH M5 THREAD	MFP18002-01	1
5	SOCKET CAP SCREW M12x1.0 X 21mm	MFV19001-01	4
6	SPACER PIVOT CHAINSTAY	MFP11080	2
7	DROPOUT PIVOT / HANGER RIGHT SHAFT	MFP20017	1

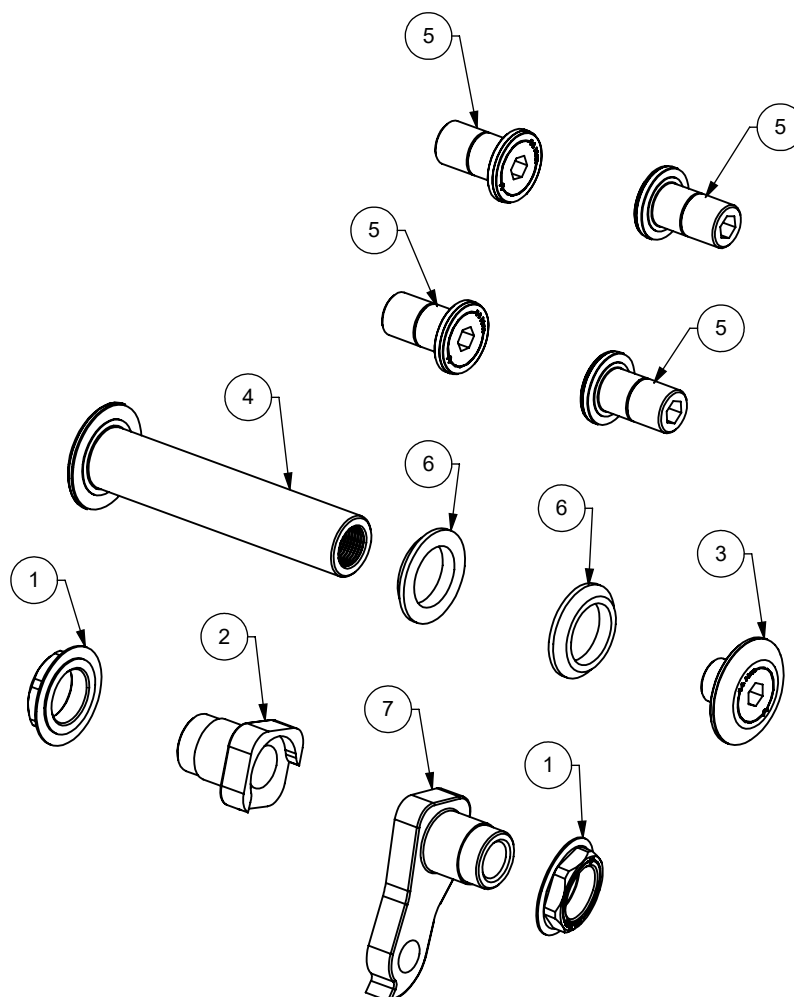


ITEM	DESCRIPTION	PART No.	QTY.
1	BEARING EXTRACTOR TOOL 21mm	MFP21037	1
2	SOCKET CAP SCREW M8x1.25 X 30mm	MFV417	1
3	SOCKET CAP SCREW M8x1.25 X 70mm	MFV428	1
4	LARGE FLAT WASHER M8	MFV15017	1

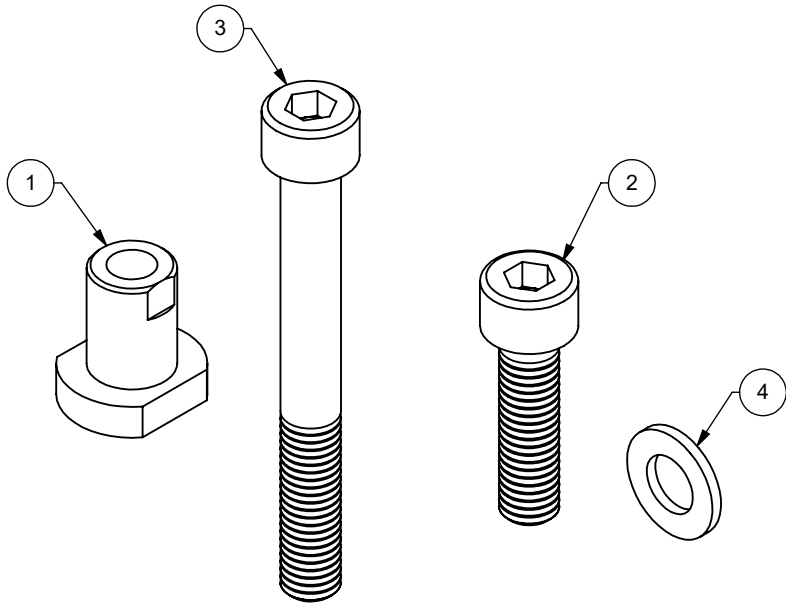


ITEM	DESCRIPTION	PART No.	QTY.
1	REAR AXLE FOR 157mm UDH	MAAX21001	1

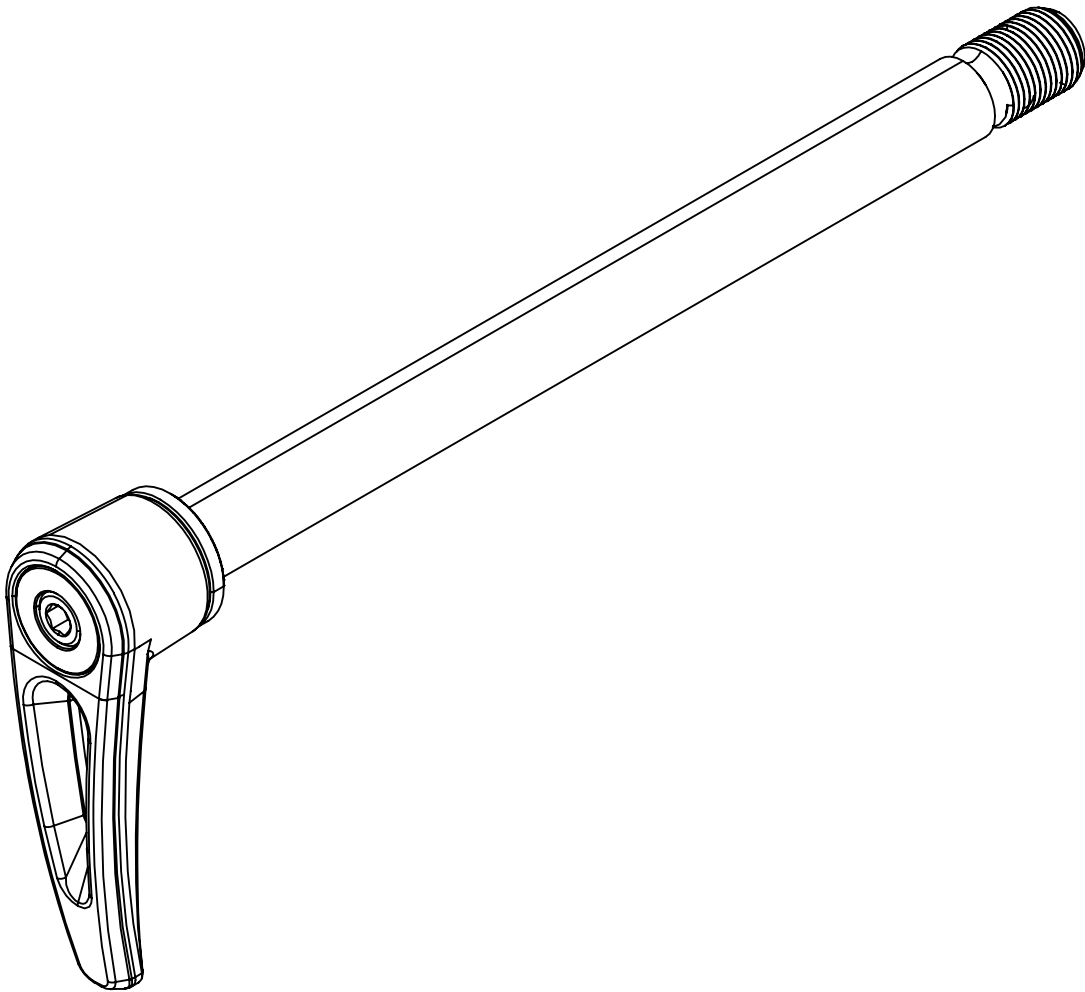


ITEM	DESCRIPTION	PART No.	QTY.
1	BALL BEARING MR20307 20x30x7; STD TYPE, DOUBLE LIP	MFP21016	1
2	BALL BEARING MR 17286 17x28x6	MFP21002	1
3	BALL BEARING 3801 LLU MAX 12x21x8	MFP19001	4
4	BALL BEARING 6903 17x30x7; STD TYPE, DOUBLE LIP	MFP11022	2

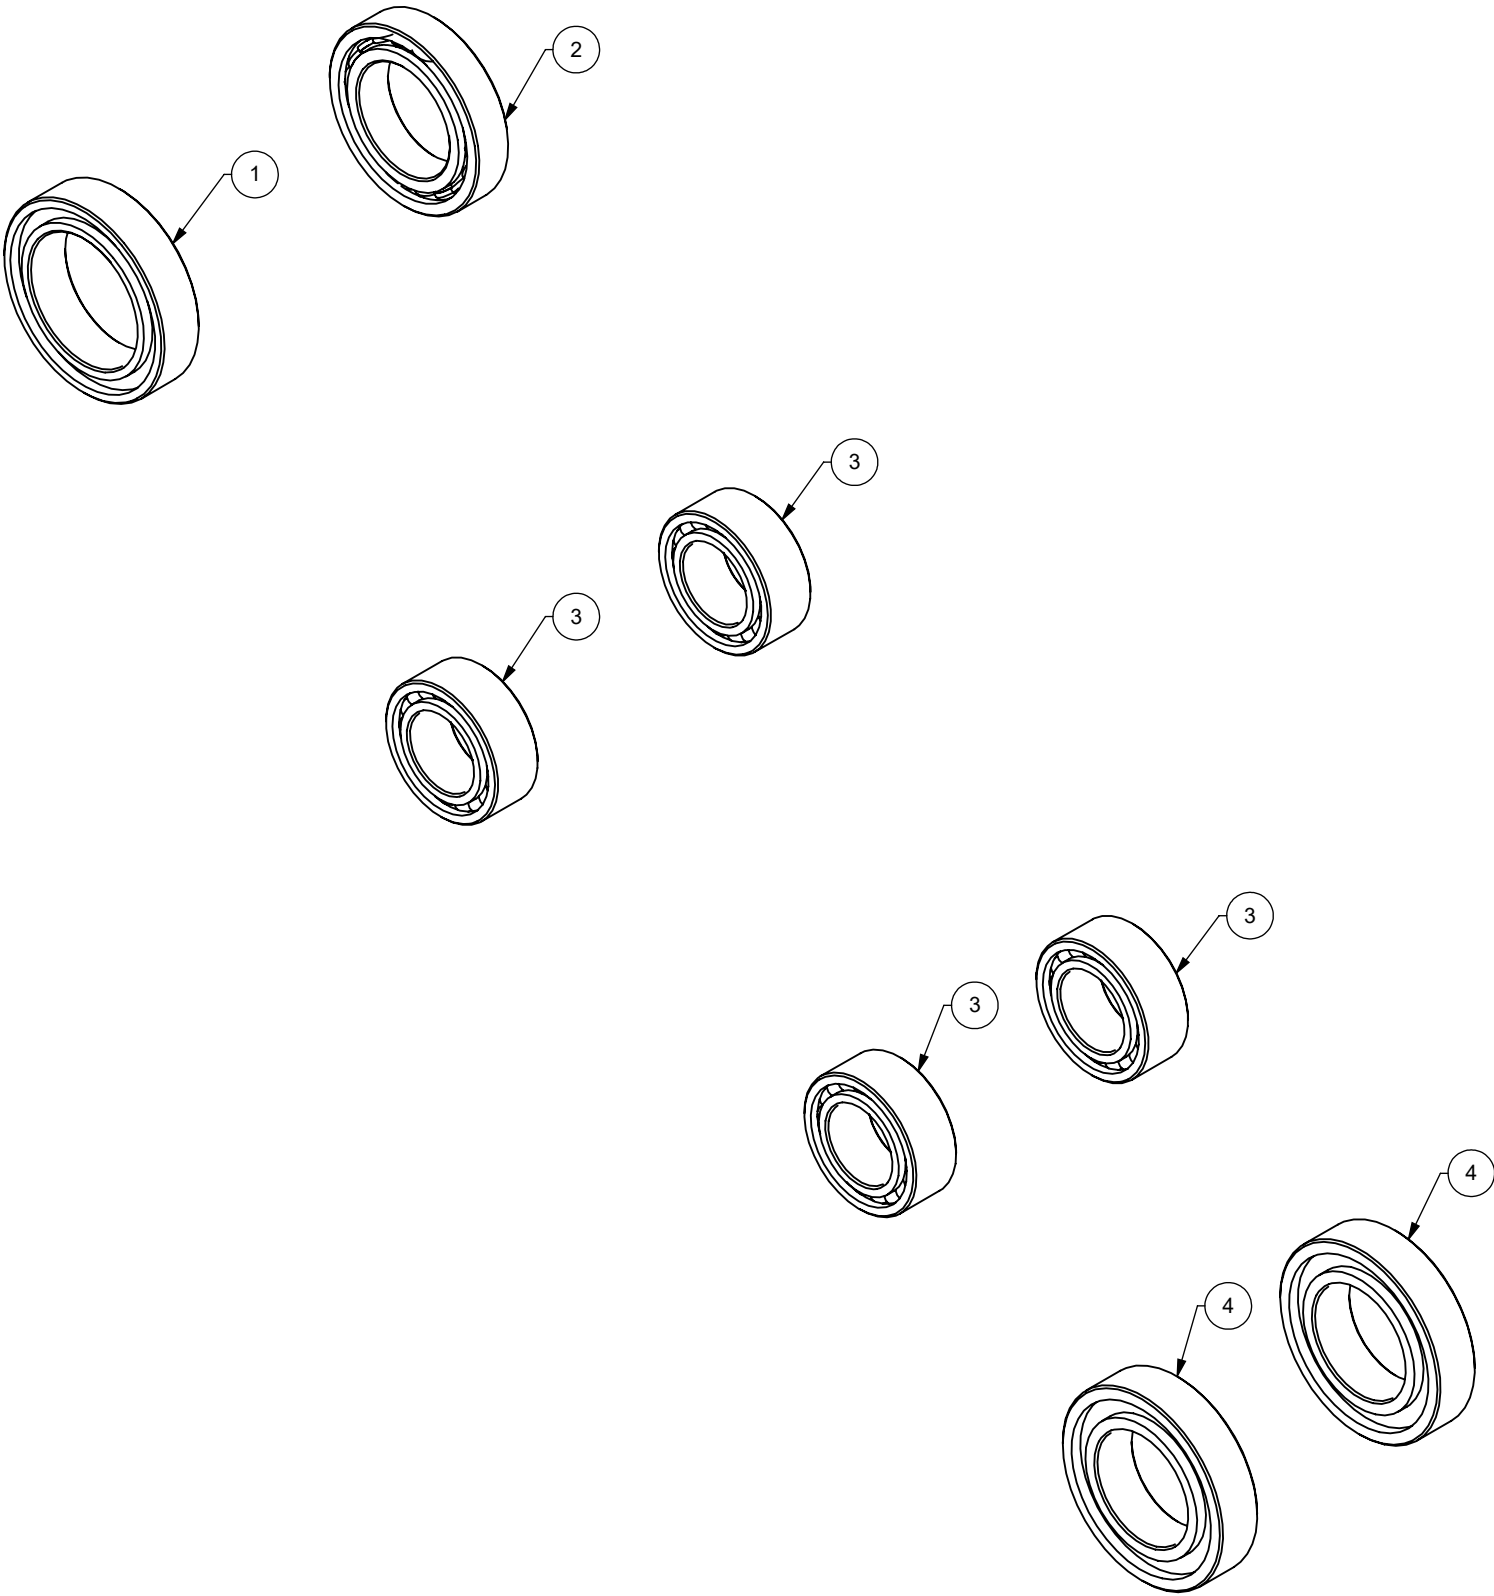


ITEM	DESCRIPTION	PART No.	QTY.
1	HANGER UDH	MFD21001	1

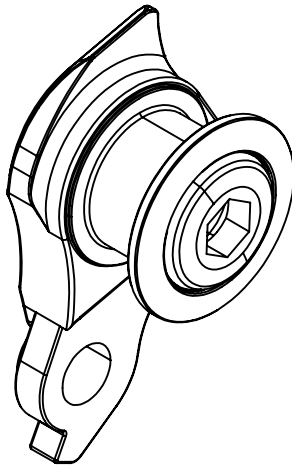



ITEM	DESCRIPTION	PART No.	MATERIAL	FINISH	QTY.
1	FOAM TUBE CABLE OUTERCASING 1150mm	MABC16001	FOAM	BLACK	1

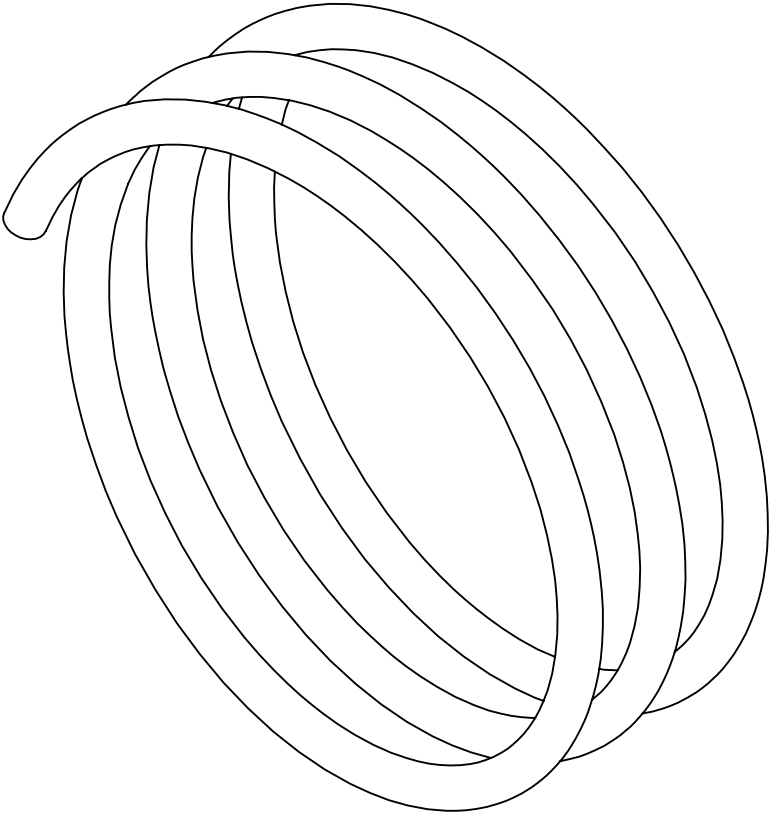

ITEM	DESCRIPTION	PART No.	QTY.
1	REAR AXLE FOR 157mm UDH	MATAR24001	1

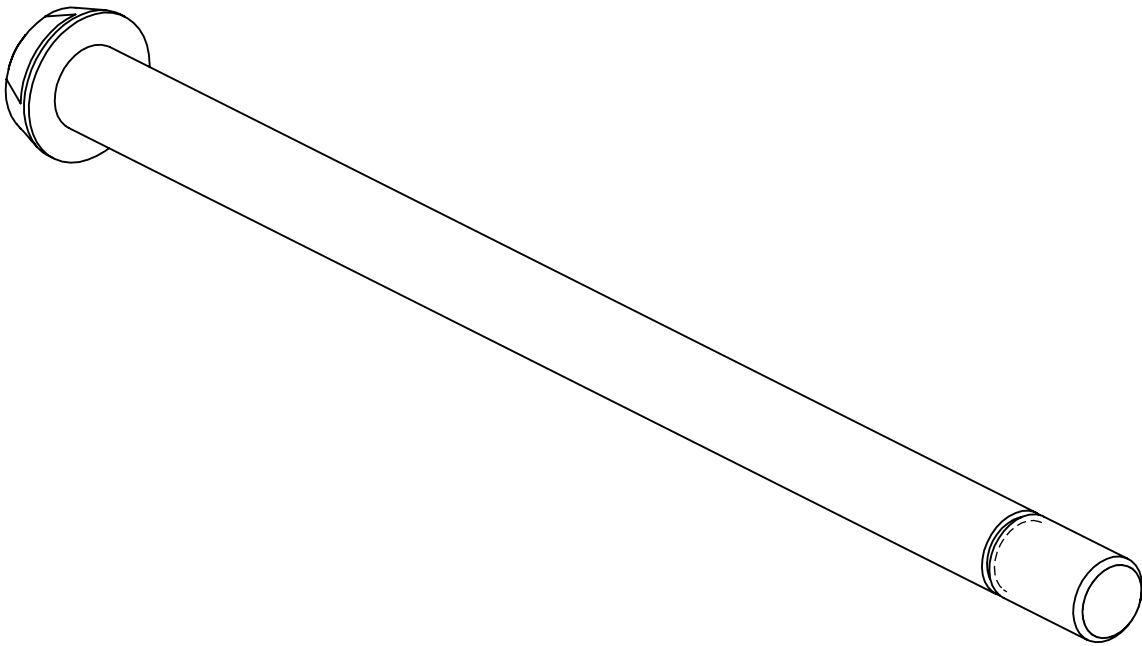

ITEM	DESCRIPTION	PART No.	QTY.
1	UPPER SHOCK SCREW M10x1.0x18mm LG. 9702	MFV17005-01	2
2	ADJUSTER 3.5mm M10x1.0	MFP19003-01	1
3	SOCKET CAP SCREW M10x1.0 X 62	MFV19003-01	1
4	ADJUSTER 3.5mm FOR 10mm SCREW	MFP19002-01	1
5	UPPER SHOCK SPACER 15mm x 10.1mm x 3mm	MFP18006-01	2

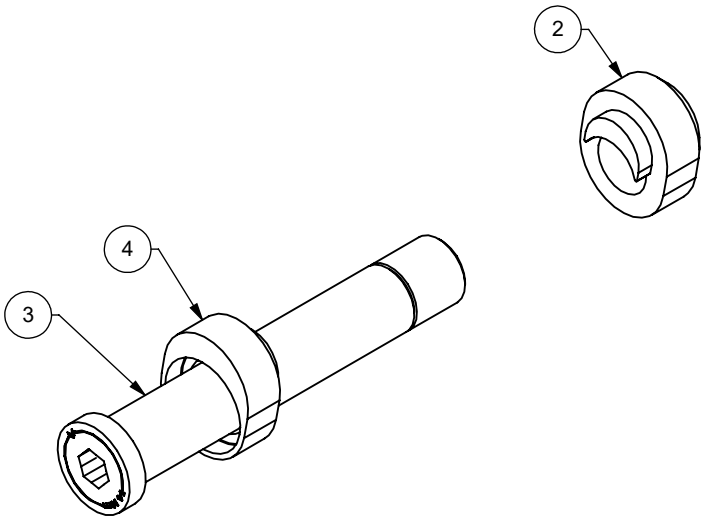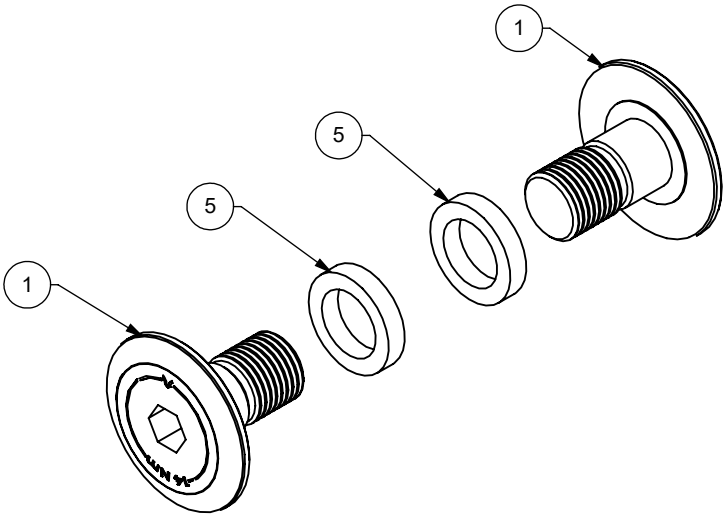

ITEM	DESCRIPTION	PART No.	QTY.
1	TOP CHAINSTAY PROTECTOR	MACP19026	1
2	DRIVE SIDE CHAINSTAY PROTECTOR	MACP19027	1
3	NON DRIVE SIDE CHAINSTAY PROTECTOR	MACP19028	1
4	DOWN TUBE PROTECTOR	MACP20005	1

